Product Type: AC Digital Power Meter

Product Model: PZEM-020

Product Function:

- 1. Electrical parameter measurement function (voltage, current, active power, energy, frequency, power factor)
- 2. Overload alarm function (over power alarm threshold, backlight and power flashing to alarm).
- 3. Power alarm threshold preset function (can set power alarm threshold).
- 4. The energy can be reset use the key.
- 5. Store data when power off.
- 6. Large-screen LCD
- 7. Backlight function.

Measurement range:

- 1. Power: test range: 0~2300W, Starting measure power: 0.2W
- 2. Energy: test range: 0~999kWh
- 3. Voltage: test range: 80~260V
- 4. Current: test range: 0~10A,Starting measure current: 0.001A
- 5. Frequency: test range: 45~65Hz
- 6. Power factor: test range: 0~1PF

The backlight can be turned on or off by short pressing the button, and the backlight status will be automatically saved when power is off.

2. Reset the battery:

Step 1: Press and hold the button for 5 seconds until the energy figure flashes, then release the button;


Step 2: If you short press the button again, the power data will be cleared and exit the reset flashing state; Step 3: If there is no button action within 5 seconds, it means that the power data is not cleared and exit the reset state.


3. Power alarm value setting:

Step 1: Long press the button for 3 seconds until the screen displays "SET CLr" and then release the button to enter the power alarm value setting state;

Step 2: The power area displays the current power alarm value and the lowest digit starts to flash. At this time, you can press the button to +1 the digit. When there is no button operation for more than 3 seconds, the digit will be switched automatically. The setting method is the same as above;

Step 3: After the setting is completed, press and hold the button for more than 5 seconds to automatically save and exit, the active power threshold setting range is 0.0~22kW

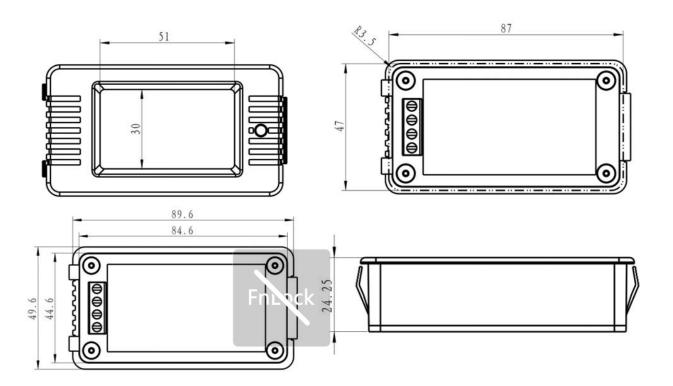

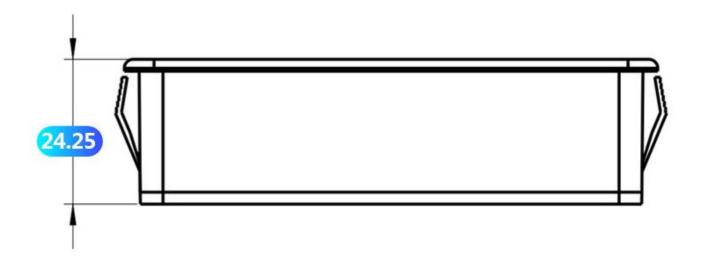

Hole Size(mm) 87